


Quick Start Guide

Refer to Owner's Manual for Safety Statements. Complete Owner's Manual available online.

This document covers RMS*A and MMS*A models with touchpad controls

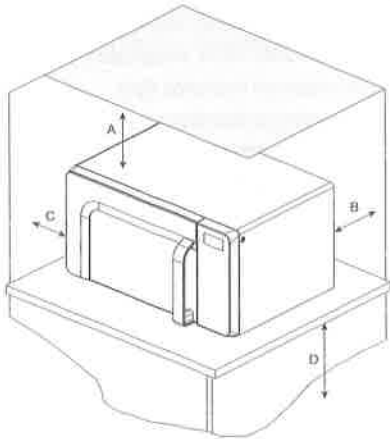

OVEN CLEARANCES

- Allow at least 7" (17.78 cm) of clearance around top of oven. Proper air flow around oven cools electrical components. With restricted air flow, oven may not operate properly and life of electrical parts is reduced.
- There is not an installation clearance requirement for the back of the oven.
- Allow at least 1" (2.54 cm) of clearance around sides of oven.
- Install oven so oven bottom is at least 3 feet (91.5 cm) above floor.


So...how do I use it? (Electronic Control)

Preset Program Keys

To cook food using preprogrammed cooking sequences:








- Open oven door and place food in oven. Close door.
- Press desired Number Key
- Oven begins cooking
- At the end of the cooking cycle, the oven beeps and LED displays "End".

X2 - Double Quantity Cooking




 


- Open oven door and place food in oven. Close door.
- Press X2 key .
- Press desired Preset Program Number Key(s). LED displays the cooking time for two quantities. The oven will start cooking per the quantity preset cooking time.


Manual Time Entry Mode

Time entry mode allows the user to manually enter a cook time and power level.

- Open oven door and place food in oven. Close door.
- Press the TIME ENTRY key .
- Press Number Keys to enter the desired cook time.
- Press POWER LEVEL key , ,  or  to change power level if desired.
- If stage cooking is desired, press TIME ENTRY key  and repeat steps 2-4.
- Press START key  to begin cooking.
- At the end of the cooking cycle, the oven beeps and LED displays "End".

Programming Mode

- Open oven door and press and hold Number Key "1" for 5 seconds.
- Press a Number Key to change or review a Preset Program setting.
- Press Number Keys to enter the new desired cook time.
- Press POWER LEVEL key , ,  or  to change power level if desired.
- If stage cooking is desired, press TIME ENTRY key  and repeat steps 3-5.
- Press START key  to save the cooking program.
- Close the door to exit Programming Mode.

Note: If STOP/RESET key  is pressed before programming is complete, changes are discarded and microwave exits programming mode.

The switching operation of this microwave oven can cause voltage fluctuations on the supply line. The operation of this oven under unfavorable voltage supply conditions can have adverse effects. This device is intended for the connection to a power supply system with a maximum permissible system impedance Z_{max} of 0.2 Ohms at the interface point of the user's supply. The user has to ensure that this device is connected only to a power supply system which fulfills the requirement above. If necessary, the user can ask the public power supply company for the system impedance at the interface point.